


# Extractor – Type FIC™



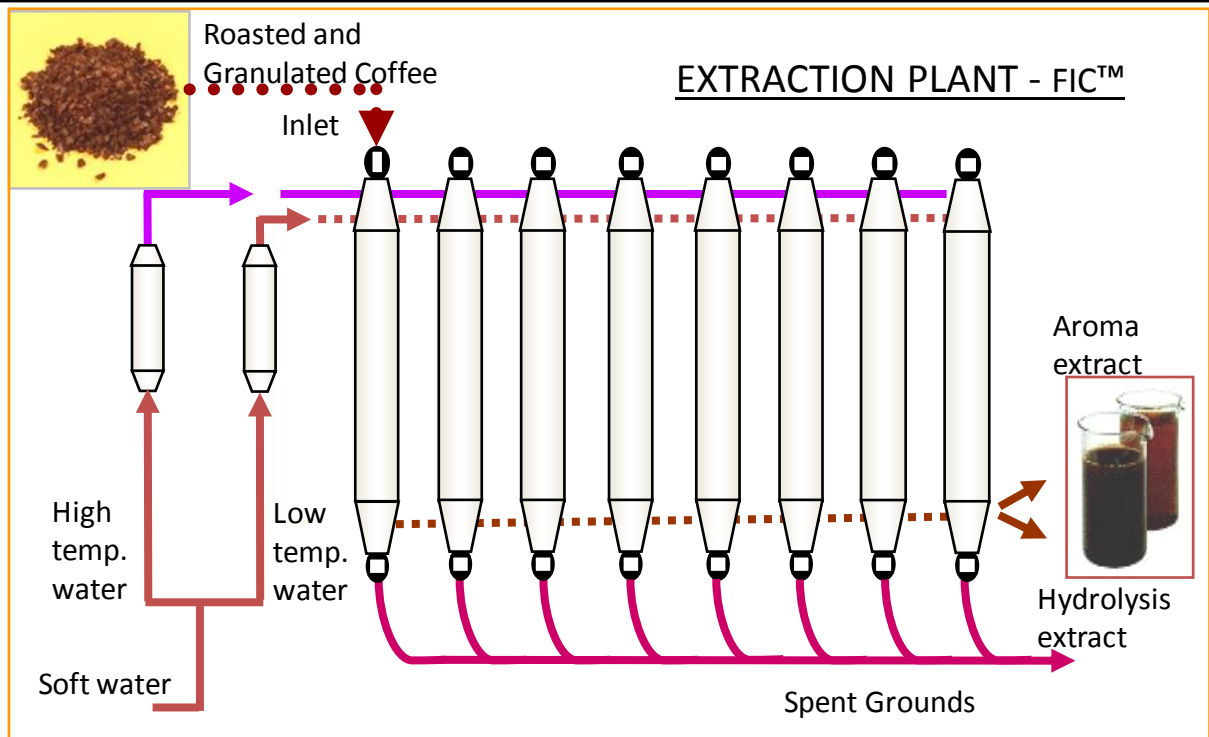

**Extraction**

GEA Niro's new and unique Fast Instant Coffee (FIC™) extractor is a continuous system that features automated multi-extraction percolators. Fully integrated with PC/PLC (Programmable Logic Controller) system, the FIC™ yields a uniform extract quality.

**Short Extraction Time - Superior Aroma Profile**

The FIC™ extractor reduces the extraction time by 50%. Water is directed through the ground coffee in two stages. The process results in two completely separate extract fractions, aroma and hydrolysis. The FIC™ extractor gives a superior aroma profile, which is ideal for high quality convenient coffee production.

After the process is completed, the extract is filtered and centrifuged. The layout of the percolator columns gives a compact design and reduces space requirements compared to standard battery extraction units.

**High Yield**

GEA Niro's extractors are designed to process a variety of coffee types as efficiently as possible. This gives the customer unparalleled flexibility and the highest obtainable yield.

**Examples of FIC™ Performance**

Coffee Type:	100% Robusta	100% Arabica
Extraction Yield*	% 53	% 47

\* Based on Dry Matter



**Standard Sizes**

FIC-125, FIC-250, FIC-500, FIC-1000  
Capacity, kg soluble solids output/h:  
125, 250, 500, 1000



Process Engineering

**GEA Niro**

Gladsaxevej 305, PO Box 45, DK-2860 Soeborg, Denmark  
Tel +45 39 54 54 54 Fax +45 39 54 58 00  
E-mail: food.dairy@niro.dk Website: www.niro.com